


Sauna Stove with Chimney Kit and Decorative Covers

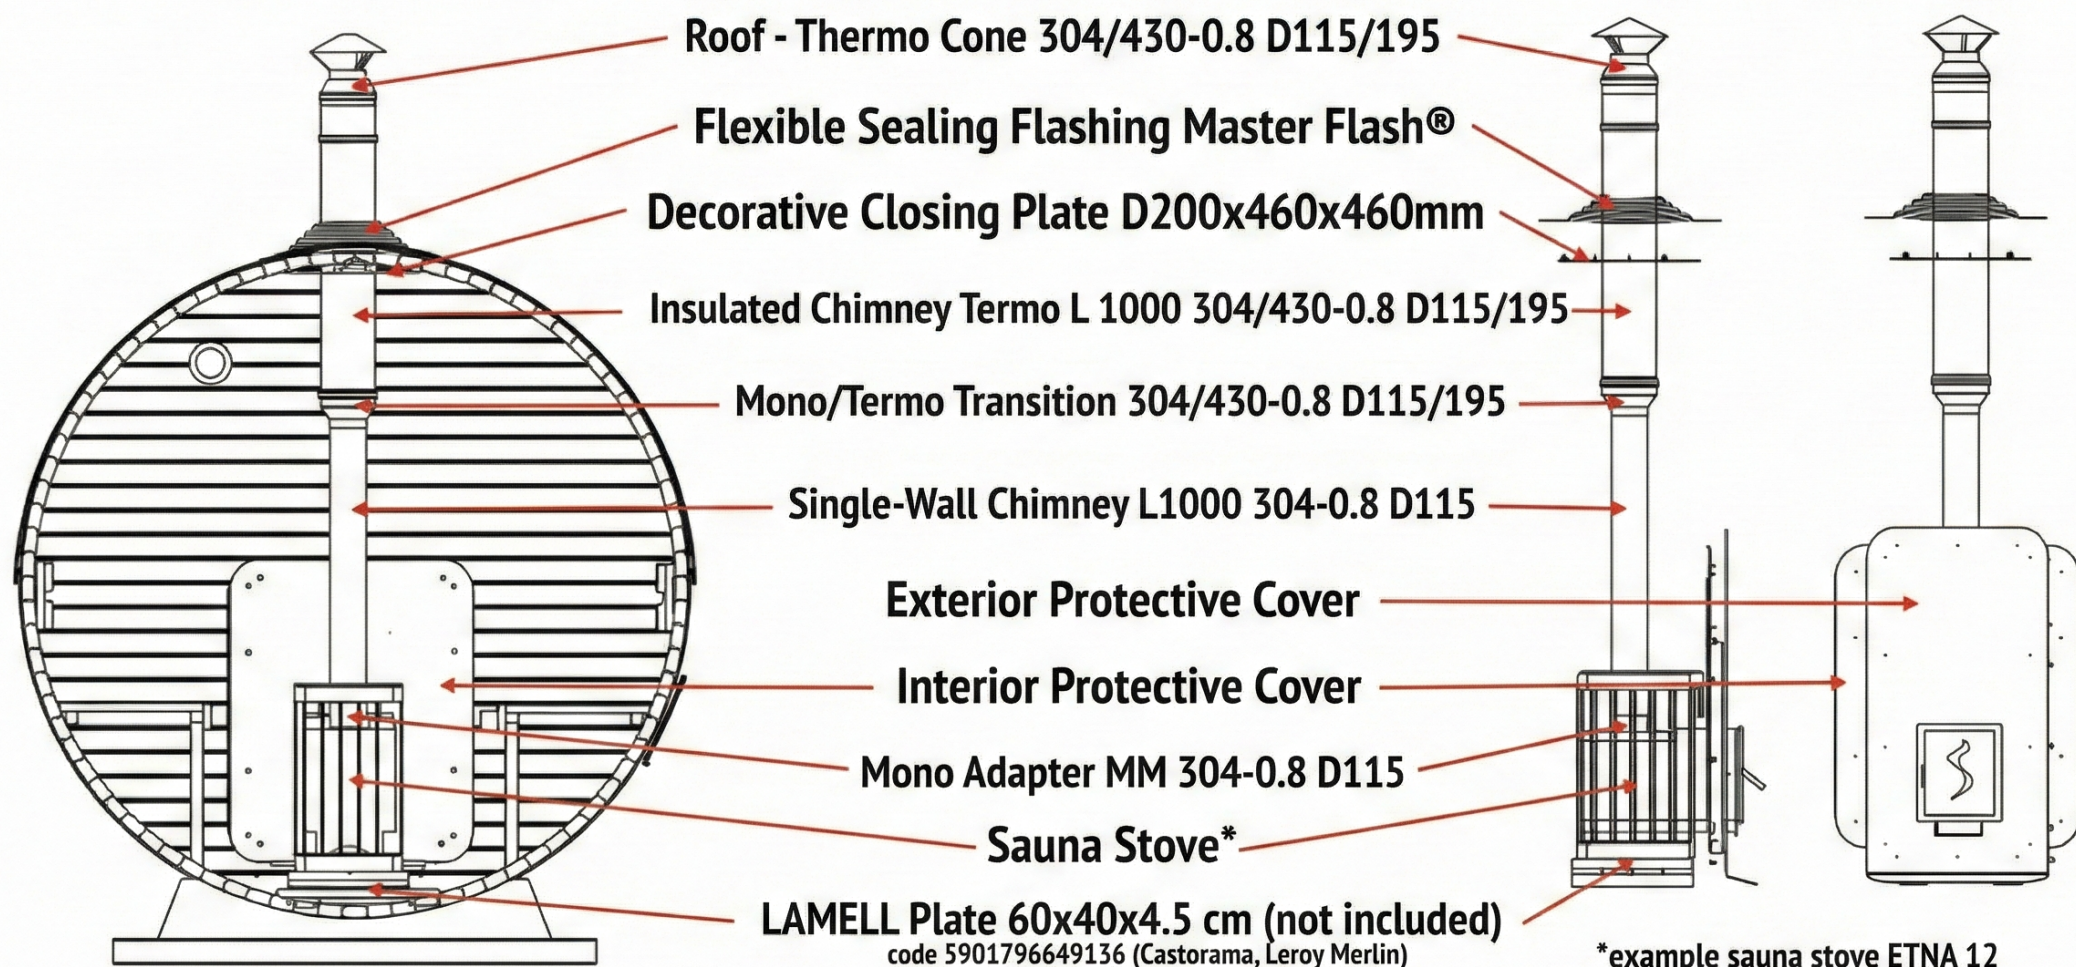

Chimney Installation Order*



1. Mono MM Adapter 304-0.8 D115

2. Single-wall Chimney L1000 304-0.8 D115

3. Mono/Termo Transition 304/430-0.8 D115/195

4. Insulated Chimney Termo L 1000 304/430-0.8 D115/195

5. Roof - Thermo Cone 304/430-0.8 D115/195


*numbering starts from the stove



6. External protective cover

Size 1200x600 mm

Galvanized steel 0.75 mm
hole requires self-making depending
on the stove model and height

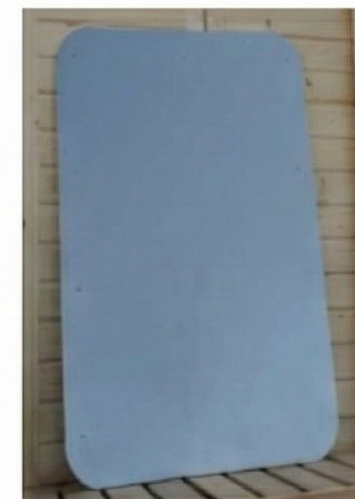


7. Internal protective cover

Size 1000x800 mm

Chrome steel 0.55 mm
(externally covered with protective foil)
hole requires self-making
depending on the stove model
and height

8. Upper decorative cover
Size 500(400)x500(400) mm


Chrome steel 0.55 mm

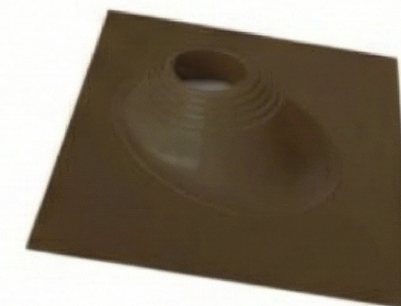

9. Flexible sealing collar Master Flash®

ensures waterproof sealing of
chimneys passing through floors
Material collar - EPDM, Collars
withstand temperatures of about 130°C

ETNA Furnace Installation

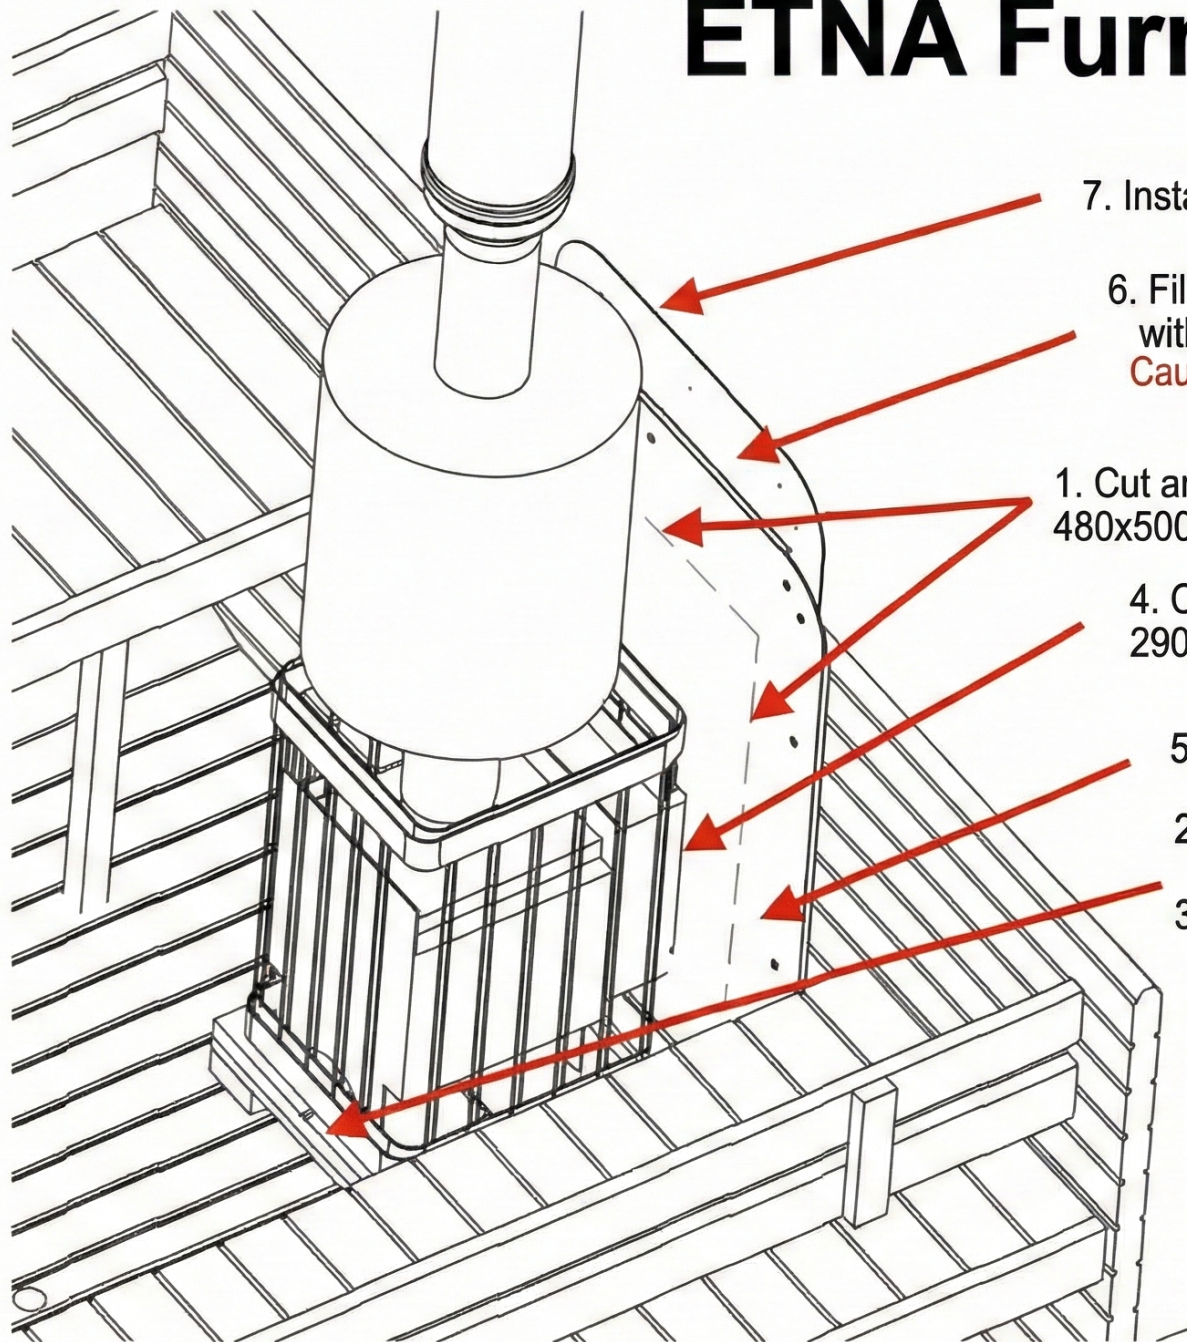

7. Install the external protective shield

6. Fill the space between the firebox and the wall with mineral wool (fire-resistant).

Caution! Not included in the set

1. Cut an opening in the sauna wall with dimensions 480x500 mm (approximate dimensions)

4. Cut an opening for the firebox with dimensions 290x290 mm (inside) and 350x350 mm (outside).

5. Install the internal protective shield

2. Cut off the part of the platform required for the furnace base (500 mm +/-50)

3. Install a concrete slab under the furnace base with dimensions 500x500x50 mm (recommended size).

Caution! Not included in the set

CAUTION!

The order of work must be followed!

ETNA Stove Chimney Installation

